

HOW TO ASSEMBLE THE Canvas Print Racks

#694042, #694043 and #694044

Imported Easels by Jack Richeson & Co., Inc. - Kimberly, WI - Phone: 1-800-233-2404 - www.richesonart.com

3/11

- 1. Organize parts as shown in Figure 1, with spring-loaded pins pointing out.
- 2. Insert INSIDE leg into short/front of print rack. (Note: if pins do not pop into holes of print rack, rotate the leg slightly.)

Insert OUTSIDE leg into tall/back of print rack. (Note: if pins do not pop into holes of print rack, rotate the leg slightly.)

3. Repeat for other side.

Note: A small amount of adjusting may be made to the rubber feet caps to help level the print rack by twisting the rubber feet caps with pliers. Use a cloth or towel to protect the feet during adjustment.

The lightweight print racks become more steady as prints are added.





