

Note: Please, open box, remove all pieces and check for damages before beginning assembly.



Parts Bag

1. 2 - 2-1/4" Bolts
2. 2 - Slide Guides
3. 2 - 1-3/8" Black Plastic Knob
4. 4 - Adjustable Feet (G)



STEP 1

Loosen black knob on Mast (B) and slide Mast upward to allow easel base to open fully. Tighten knob. Lay the Easel Frame (D) on its side. Attach all of the adjustable feet (G).



STEP 2



Stand easel upright. Holding the frame steady, thread a bolt through the support leg (F) and easel frame (D). Add a slide guide and a black knob. Tighten. Repeat on other side.

STEP 3

Loosen the black knobs on the Large Painting Tray (E). Slide the tray down the Mast channel and tighten knobs at the desired height. Loosen the knob on the Small Painting Tray (A) and slide down the mast. Tighten knob at desired height.

