



Jack Richeson
& Co., Inc.



HOW TO ASSEMBLE THE Table Top Easel

#844200 *Made from Lyptus® Wood*

Lyptus® is a registered trademark of Weyerhaeuser.

Jack Richeson & Co., Inc. P.O. Box 160, Kimberly, WI 54136-0160 1-800-233-2404 Fax:1-800-233-2545 richesonart.com

Assembly instructions for the Table Top Easel.

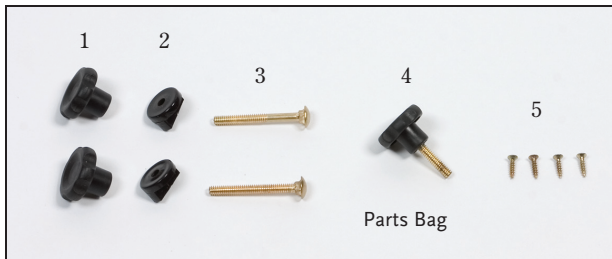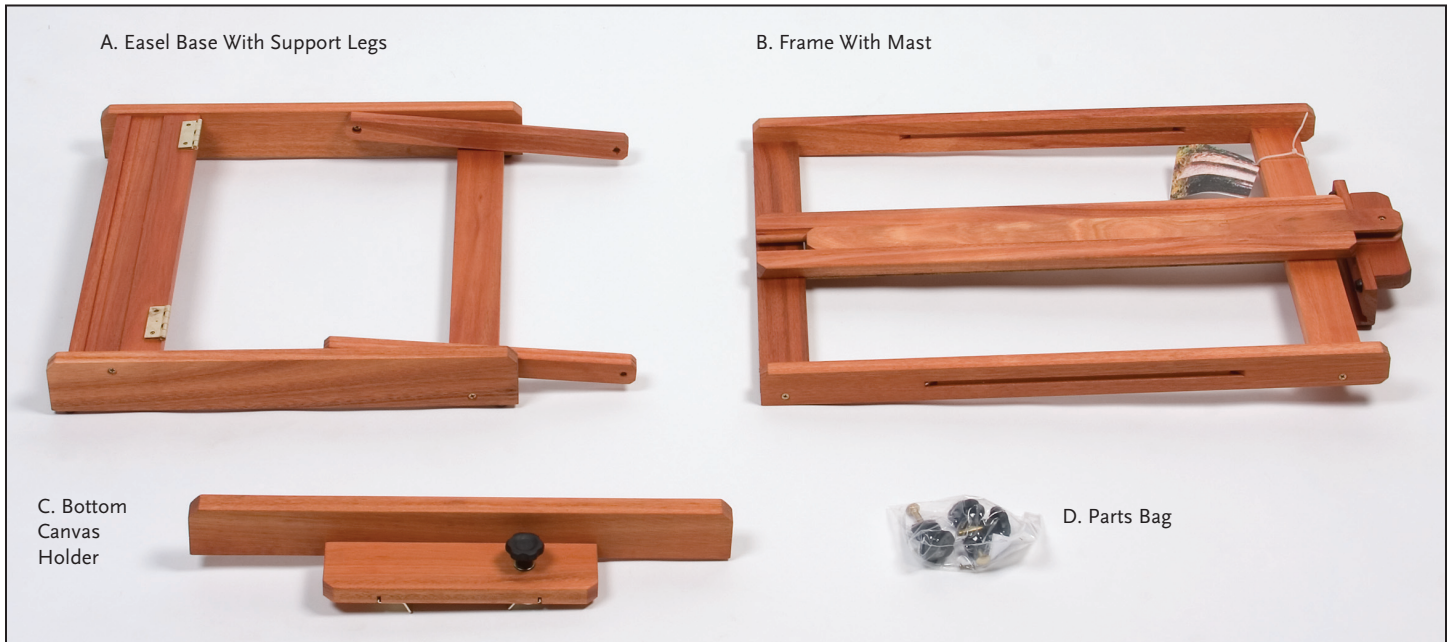

Parts Bag Contains:

1. 2 - 1³/₈" Black Knobs
2. 2 - Slide Guides
3. 2 - 2³/₈" Bolts
4. 1⁷/₈" Black Knob With Bolt
5. 4 - 5/8" Wood Screws

Step One:

Attach the Frame (B) to the Easel Base (A) using the Wood Screws (5). Line up the brass hinges to the pre-drilled holes on the bottom edge of the Frame and insert screws. Tighten with a screw driver.





Step Two

Step Two:
 The Support Legs connect to the Frame (B) with the use of Slide Guides. Thread the 2³/₈" Bolt through the hole in the Support Leg, through the slotted area in the side of the Frame, and through the Slide Guide. Use the 1³/₈" Black Knob to tighten into position. Repeat on other side.

Step Three:
 Loosen the black knob on the Bottom Canvas Holder (C) and slide over the Mast. Position at desired height and tighten the knob.

Step Four:
 Remove the Top Canvas Holder from the Mast and turn it around to face the front of the easel. To set into place insert the 1⁷/₈" Black Knob With Bolt into the hole on the back of the Frame. Tighten when the Top Canvas Holder is at the height you want.



Step Three



Step Four



Top Canvas Holder

Bottom Canvas Holder