




BEST
Easels by Richeson

HOW TO ASSEMBLE THE Ultimate Easel

#880000

BEST ARTIST'S MATERIALS - A RICHESON COMPANY - KIMBERLY, WI - PHONE: 1.800.233.2404 - RICHESONART.COM


8/19

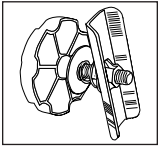

WEDGE-LOK SYSTEM

Height and tray adjustments unlock easily, yet lock into place and stay


locked because of the Wedge-lok System. The metal plate features wedge-cut edges that conform to the wedge-cut sections of the hardwood. When the knob is tightened, the inward tension pulls the metal plate snugly against the wood for a solid lock.

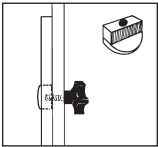


SLIDE GUIDES

Slide Guides make angle and height adjustments on BEST easels

smooth. These circular graphite impregnated plastic inserts are used wherever there is a slot in the wood of the easel. This part allows for smooth movement and protects the hardwood from the metal bolt.

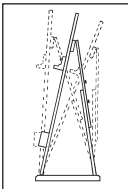

Achieve these angles by using the Slide Guide System (explained in the diagram above).

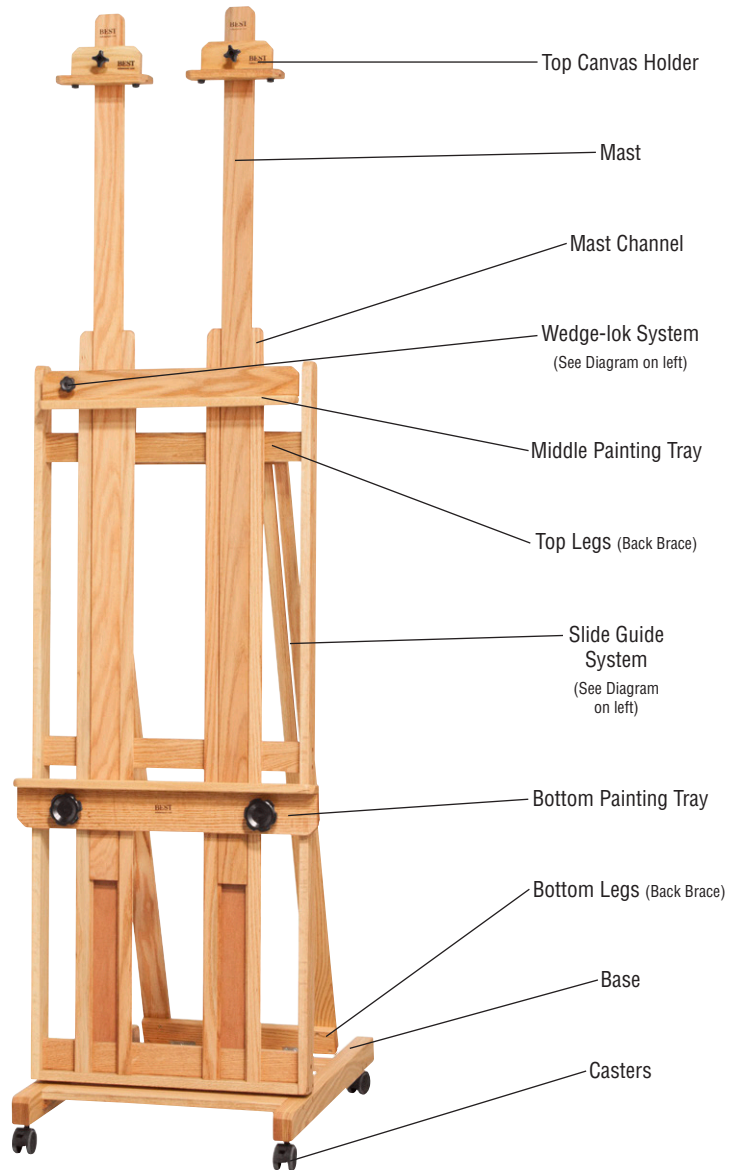

EASEL ASSEMBLY

1. Attach Casters (locking casters to the front) to the Base with the included screws. Set the easel Base on the floor with Casters locked.
2. Loosen knobs, open easel up, use the Slide Guide System to get easel to the desired angle and tighten knobs.
3. The Masts are packed loose in the carton. Insert the Masts into the Mast Channels, slide down and tighten knobs on back of easel.
4. Bottom Painting Tray - loosen Wedge-lok System on tray and slide down the Mast Channels. Tighten knobs at the desired position.
5. Repeat step 4 with the Middle Painting Tray.
6. Loosen the knobs on Top Canvas Holders, slide down the Masts and tighten in desired position.