

HOW TO ASSEMBLE THE Ambrosia Print Rack

#886011

Imported Easels by Jack Richeson & Co., Inc. - Kimberly, WI - Phone: 1-800-233-2404 - www.richesonart.com


1/16


Bag contents:


- 8 black knobs
- 8 washers
- 8 2" bolt screws
- 8 2" screws
- 16 wood dowels
- 8 black caps
- 8 black plugs


Wood Parts:

- 2 top rails
- 2 bottom rails
- 4 side rails
- 8 rack slats
- 2 base pieces
- 1 flat board

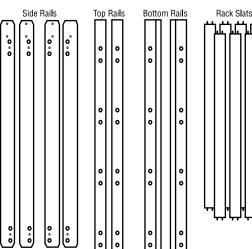

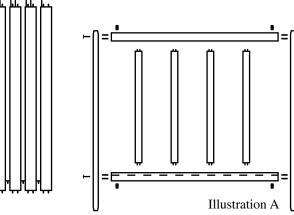

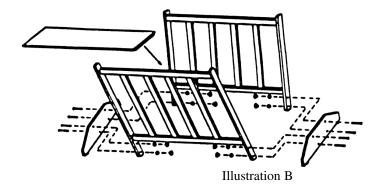

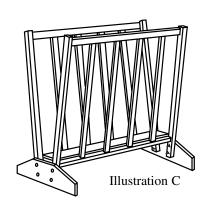

- 1.) Lay out all pieces as shown above.
- 2.) Assemble one side of the rack by connecting the top railing and two side railings with wooden dowels, black plugs and the 2" screws. Line up four rack slats with the embedded dowels with the corresponding holes in the top railing. Align the bottom railing with the other end of the slats and insert the wooden dowels into the corresponding holes. (See illustration A.)
- **3**.) Repeat step 2 for the other side of the rack.
- **4.**) Match up the holes from the end of one of the racks with a base piece. Attach them with a 2" bolt screw going first through the base, then the rack. Place a washer on the screw and tighten it with a black knob. Repeat for other hole. (See illustration B.)
- **5**.) Attach the other side of the rack to the assembly made in step 4 with the 2" bolt screw, washer and black knob
- **6.**) Attach the second base piece to the other end of the racks, matching up the holes and repeat procedure on other side.
- 7.) Place the flat board on the bottom, in between the racks. If the board is loose, slightly loosen the knobs and adjust the wooden racks until it fits snug, then tighten.
- **8**.) When finished, insert black caps into exposed holes.