

PALETTE BOX INSTRUCTIONS

1 closed palette box



- The palette box features two folding brush holder accessory trays. The trays protect the tempered glass palette in the CLOSED position.
- The trays are secured in the closed position with a magnetic latch.

2 palette box latch




- To unfold the accessory trays, push latch to OPEN position.
- The brush holder accessory trays may now be unfolded.

3 palette box open




- In the OPEN position you can access the tempered glass palette (included)
- The brush holder accessory trays can hold brushes, paints, supplies and accessories.

4 magnetic glass palette block

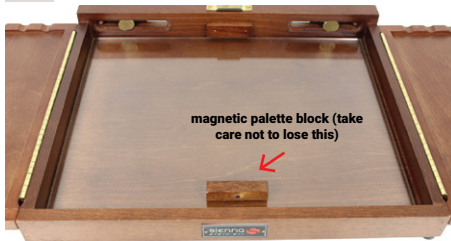

- A small magnetic block holds the tempered glass palette in place when the palette box is closed.
- The magnetic block makes removing the glass palette for cleaning very easy.

5 adjustable tripod blocks

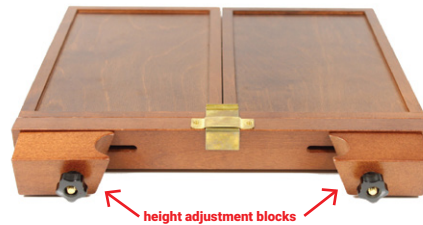

- The palette box features two adjustable tripod blocks that fit on the Sienna Tripod (sold separately).
- The working height of the palette box on the tripod can be adjusted with the height adjustment knobs.

6 attach palette box to tripod



- With the palette box CLOSED and the tripod blocks adjusted to the desired height, place the palette box on the front two legs of the Sienna Tripod.

7 open the palette box



- When the palette box is securely attached to the tripod, you can open the palette box and begin to create your masterpiece.

IMPORTANT: Do not lift or move the tripod with the palette box attached to the legs. Doing so can cause the tripod legs to fold in and the Palette Box could fall.

Always remove the palette box before adjusting or moving the tripod.

using with a French easel



- With the adjustable tripod blocks removed, the palette box turns into the perfect French easel companion.
- French easel sold separately.

optional pastel insert grid



- The palette box can also be used as a pastel box with the optional Sienna Pastel Insert Grid (sold separately).
- Remove the magnetic block and glass palette. Follow Pastel Insert Grid installation instructions.

optional watercolor palette



- The palette box can also hold the Sienna Watercolor Palette (sold separately).
- Remove the magnetic palette block and glass palette. Insert the watercolor palette. Replace the magnetic block.



sienna
plein air

Jack Richeson & Co., Inc.
557 Marcella St. Kimberly, WI 54136

1.800.233.2404
richesonart.com

